

## Country Garden

*This specification sheet details the installation techniques and specifications for the Country Garden Style.*

### Step 1: Layout

Begin by staking out the area to be enclosed and attach a string line to the stakes. When installing the posts, stay about 1/8" away from the string.

Measure and mark your post hole locations making note of your gate locations. A 100' tape measure makes this task easy.

### Step 2: Post Holes

Using a post hole digger, dig your holes to the desired depth as specified for your fence style in table 1.

Place each post in the corresponding hole. Starting with your first post, usually an end post, use a level to plumb the post and fill the hole with pre-mixed concrete. Keep the concrete level 2-3" below grade, then backfill the remaining amount with topsoil.

Proceed in this fashion, checking your post centers as you go, for all remaining posts.

**IMPORTANT:** Make certain that the bottom rail hole remains at least 5" above grade.

Once the posts are installed and while the concrete is still wet, sight across the top of the posts to ensure the posts follow the contour of the land.



Adjust your posts as needed checking for plumb as you do. Allow the concrete to set overnight before proceeding.

### Step 3: Assembly

*If you purchased your fence in a pre-assembled condition, you may proceed to step 4.*

**Important note:** See page two for proper placement of pickets.

Prepare a smooth, clean surface and lay two backrails drilled side up. Insert a picket clip into each hole

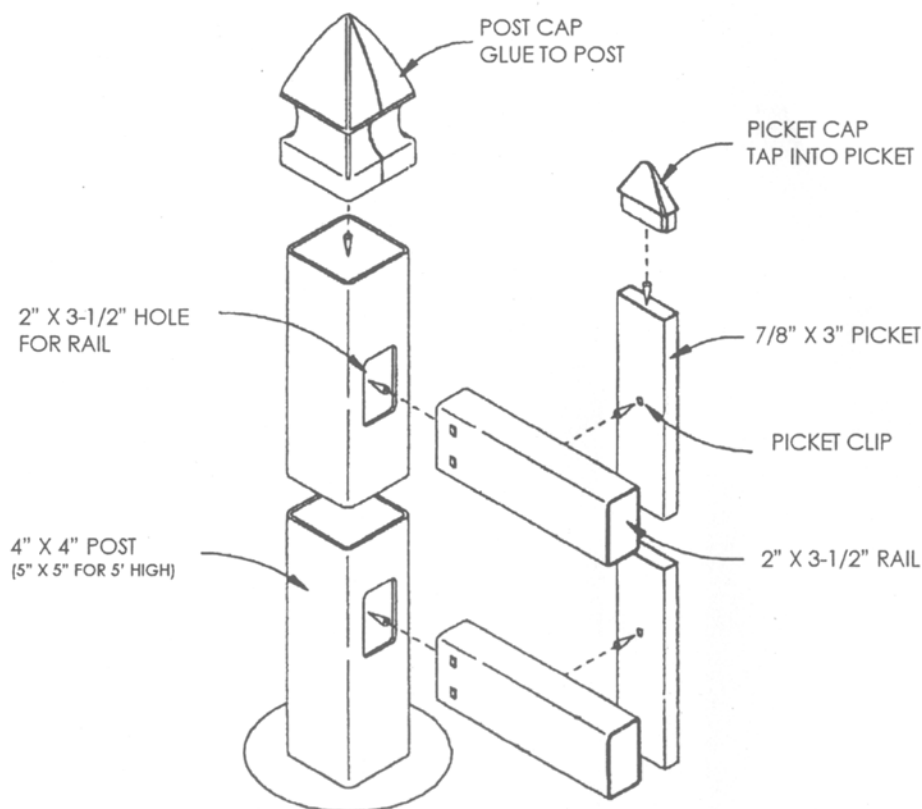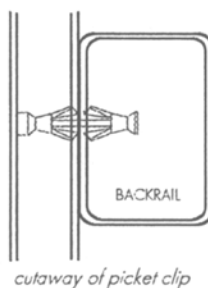

in the picket. You may need to rock the clip back and forth to lock it in place. Make certain to insert the thick end into the picket. Place the picket down over the rails and, with the palm of your hand, firmly seat the clips. When complete, stand the

section upright and tap the picket caps in place with a rubber mallet.

### Step 4: Installation

While grasping a section of fence, insert both rails in to the first post, slide back and insert both rails in to

the opposite post. Using this technique, proceed with the remaining sections until complete. Where corners exist, you may have to mitre the rails.

### Step 5: Completion

Glue on the post caps and enjoy your fence!

COUNTRY GARDEN		
	3', 3.5', 4' High	5' High
POST HOLE	27" DEEP	34" DEEP
POST CENTERS	72-1/2"	73-1/2"
END SPACING	3"	3"

table 1


## Country Garden

When using these charts, please remember that all dimensions are measured from the bottom of the picket. In the case of hole placement, the dimensions are measured to the center of the hole.


A = Overall picket length

B = Spacing to top hole


C = Spacing to bottom hole

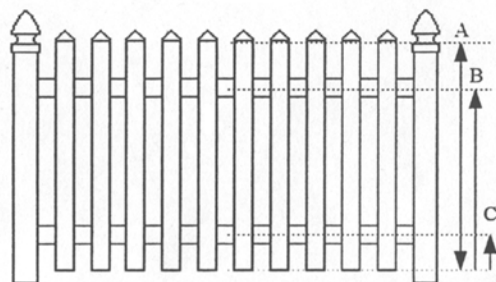

	A	B	C
36" HIGH	33-1/4"	27-1/4"	4-3/4"
42" HIGH	39-1/4"	33-1/4"	4-3/4"
48" HIGH	45-3/4"	39-1/4"	4-3/4"
60" HIGH	57-1/4"	50-1/4"	4-3/4"

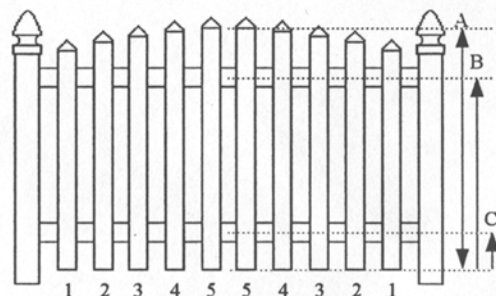

	A					B	C
	1	2	3	4	5		
36" HIGH	27-1/4"	28"	29-1/4"	30-7/8"	33-1/4"	21-1/4"	4-3/4"
42" HIGH	33-1/4"	34"	35-1/4"	36-7/8"	39-1/4"	27-1/4"	4-3/4"
48" HIGH	39-3/4"	40-1/2"	41-3/4"	43-3/8"	45-3/4"	33-1/4"	4-3/4"
60" HIGH	51-1/4"	52"	53-1/4"	54-7/8"	57-1/4"	44-1/4"	4-3/4"

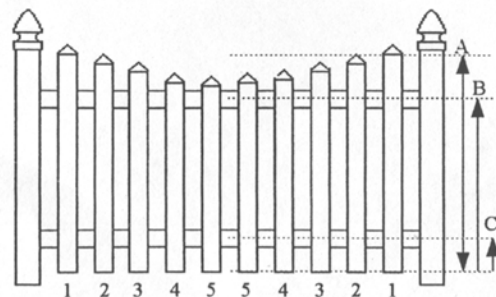

	A					B	C
	1	2	3	4	5		
36" HIGH	33-1/4"	30-7/8"	29-1/4"	28"	27-1/4"	21-1/4"	4-3/4"
42" HIGH	39-1/4"	36-7/8"	35-1/4"	34"	33-1/4"	27-1/4"	4-3/4"
48" HIGH	45-3/4"	43-3/8"	41-3/4"	40-1/2"	39-3/4"	33-1/4"	4-3/4"
60" HIGH	57-1/4"	54-7/8"	53-1/4"	52"	51-1/4"	44-1/4"	4-3/4"